

Form Number 3354-429 Rev A



40 Inch Tiller Compact Utility Loader

Model No. 22445 - 260000001 and up.

Parts Catalog

Ordering Replacement Parts

To order replacement parts, please supply the part number, the quantity, and the description of each part desired.

Understanding Reference Numbers

Each Identified part in an illustration has a reference number. The reference number for a part also appears in the parts list, along with other information about the part.

This catalog uses two special reference number formats, one to indicate parts in a service assembly and another to indicate the quantity of a given part in an illustration.

Service Assembly Reference Numbers

Parts in service assemblies have reference numbers in the form a:b. The a represents the reference number of the entire service assembly and the b represents a sequential number unique to each part within the service assembly. For example, a wheel assembly might be identified by reference number 6, the tire by 6:1, the valve by 6:2, and the wheel by 6:3. When you order the assembly identified by reference number 6, you receive all parts identified by reference numbers 6:1, 6:2, and 6:3. However, you may also order any part individually. Reference numbers of this type appear in illustrations and in part lists.

Reference Numbers Indicating Quantity

In an illustration, if a reference number indicates more than one part, the reference number has the form nX y. The n represents the quantity of the part, the X is the multiplication symbol, and the y represents the reference number.

For example, in an illustration, the reference number 2X 37 means that two of the parts identified by reference number 37 are indicated.


Register your product at www.Toro.com

© The Toro Company - 2006 All Rights Reserved



0



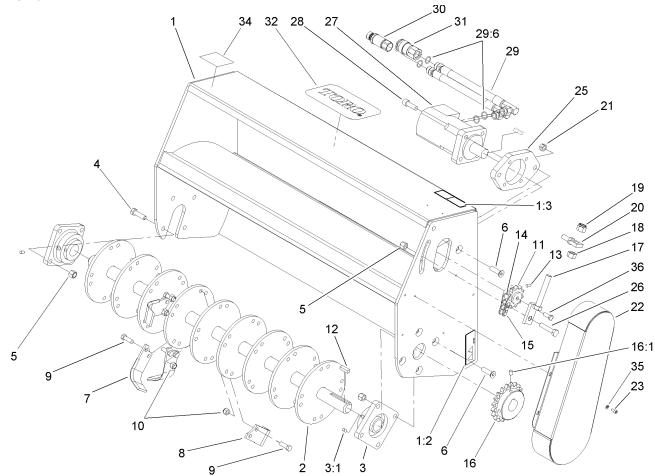


Tiller Assembly

Ref	Part No.	Qty.	Description	Ref	Part No.	Qty.	Description
1	104-6263	1	Tiller Frame ASM	21	104-6266	1	Nut-Side Deform
1:2	93-7321	2	Decal-Danger	22	98-9071	1	Cover-Chain, Tiller
1:3	107-9366	1	Decal-Warning	23	3274-52	4	Screw-HSH
2	98-9087	1	Shaft-Tine	25	98-9070	1	Plate-Mount, Motor
3	99-9979	2	Bearing ASM	26	325-9	1	Screw-HH
3:1	3246-17	2	Setscrew-HSH	27	98-9084	1	Motor-HYD
4	325-7	4	Screw-HH	28	3274-4	4	Screw-HSH
5	3296-23	10	Nut-Lock, NI	29	104-6207	2	HYD Hose ASM
6	98-9931	5	Bolt	29:6	237-80	2	O-Ring
7	104-2043	18	Tine-RH	30	100-4701	1	Nipple-Connect, Pressure
8	104-2044	18	Tine-LH	30:1	100-6120	1	Seal Kit (Not Illustrated)
9	324-29	72	Bolt-HH	31	104-6134	1	Coupler-Face, Flush
10	32146-7	72	Nut-Lock, Insert	31:1	105-8396	1	Seal Kit (Not Illustrated)
11	98-9085	1	Sprocket-11 Tooth	32	92-1242	1	Decal
12	98-9935	1	Key-Square	34	98-3269	1	Decal
13	3246-4	2	Screw-Set	35	3253-3	4	Washer-Lock
14	98-9088	1	Chain-Roller	36	323-6	1	Screw-HH
15	98-9089	1	Link-Connecting				
16	98-9086	1	Sprocket-20 Tooth				
16:1	3247-3	2	Screw-Set				
17	98-9082	1	Chain Adjustment ASM				
18	3217-11	1	Nut-Hex				
19	3296-53	1	Nut-Lock, NI				
20	99-5044	1	Holder-Adjustment				



Call AAA Rent-All at 225-291-1356 for assistance ordering parts

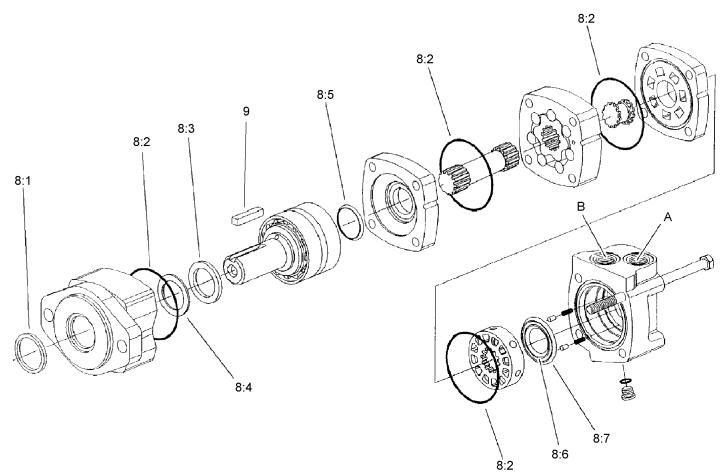

Hydraulic Motor Assembly No. 98-9084

Ref	Part No.	Qty.	Description
8	56-6890		Seal Kit
8:1		4	Seal-Dust (Not Serviced Separately)
8:2		1	Seal-Exclusion, Shaft (Not Serviced Separately)
8:3		1	Seal-Shaft (Not Serviced Separately)
8:4		1	Ring-Back-Up (Not Serviced Separately)
8:5		1	Seal-Face, Shaft (Not Serviced Separately)
8:6		1	Seal-Face, Inner (Not Serviced Separately)
8:7		1	Seal-Face, Outer (Not Serviced Separately)
9	98-9934	1	Key-Square



Call AAA Rent-All at 225-291-1356 for assistance ordering parts

